


## Bituthene Upper termination Option 1

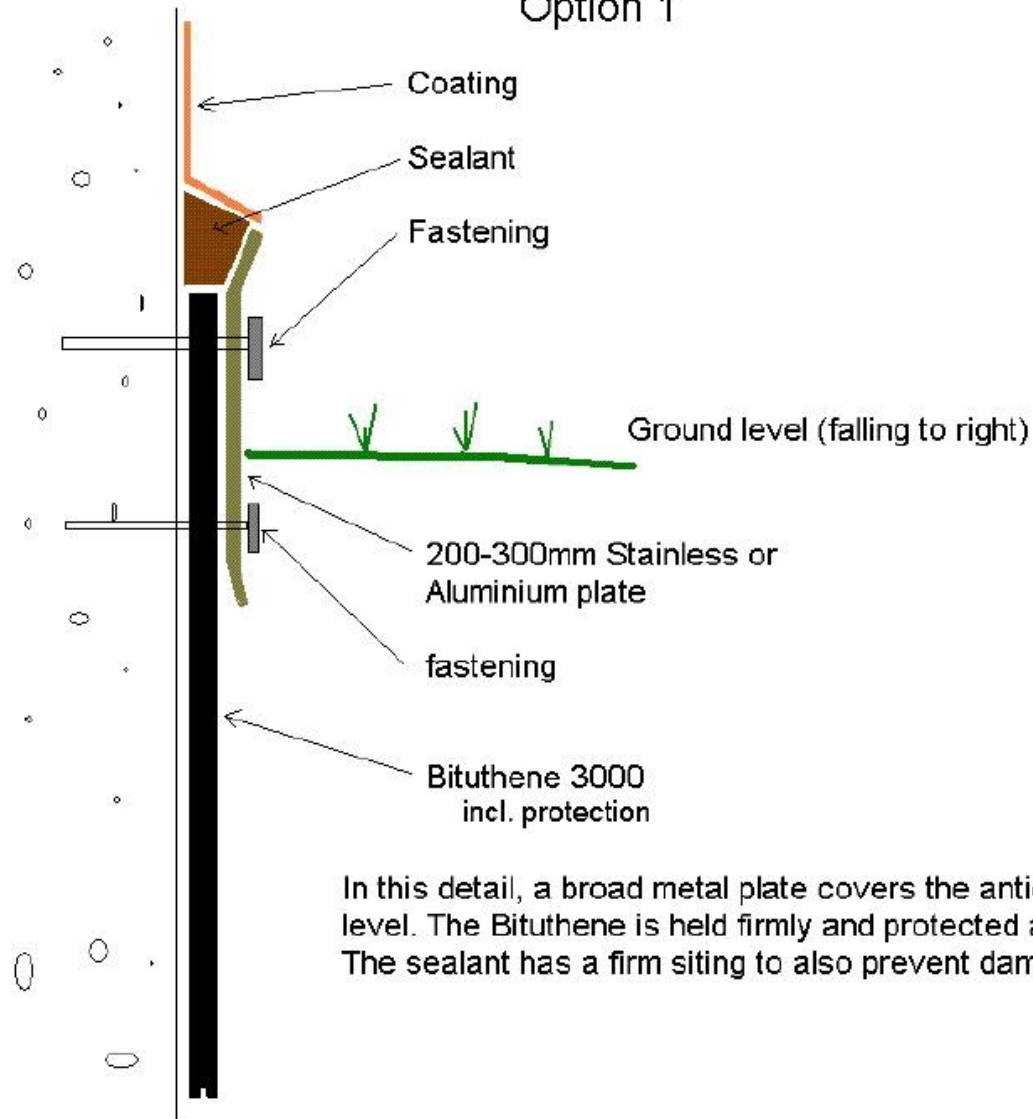

In this detail, a broad metal plate covers the anticipated ground level. The Bituthene is held firmly and protected against damage. The sealant has a firm sitting to also prevent damage.

**allnex**

**BITUTHENE 3000 TOP EDGE TERMINATION**

**BITUTHENE WATERPROOFING SYSTEM**

DRAWING: BIT-031

SCALE: Not to scale

EFFECTIVE DATE: 01-03-2019



# Bituthene 3000 Top Edge Termination

Prior to Membrane Installation, Review the Bituthene® Data Sheet

## Surface Prep

All surfaces must be structurally sound and free from spalled areas, loose aggregate, sharp protrusions or other matter that may hinder the adhesion or regularity of the membrane installation. The surface should also be free from frost, dirt, grease, oil or other contaminants as outlined in the Bituthene® Data Sheet section on Surface Preparation. Clean loose dust and dirt from the surface and prime with appropriate primer.

## Detailing

1. Mechanically fasten Allnex termination bar to top edge of Bituthene membrane
2. Seal top of termination bar using Bituthene LM3000 or Bituthene Mastic.
3. Seal bottom edge of Bituthene 3000 using Bituthene LM3000.

## Special Notes

Bituthene membranes should not be used in areas where they will be permanently exposed to sunlight, weather or traffic. Protect membrane from sunlight as quickly as possible after installation.